
## 2190Ti Series Air Impact Wrench - Exploded View

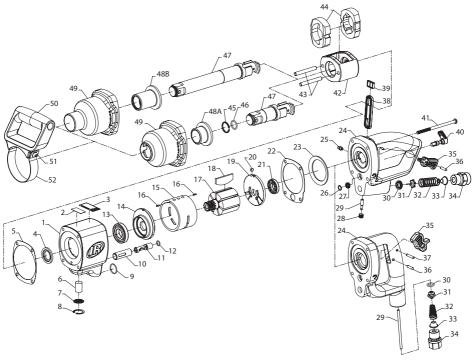

(Dwg. TP2223)

## 2190Ti Series Air Impact Wrench - Parts List

| Item | Part Description                 | Part Number  | Item | Part Description                   | Part Number |
|------|----------------------------------|--------------|------|------------------------------------|-------------|
| *    | Housing Assembly                 | 2925B-A40    | 17   | Rotor                              | 2080-53     |
| 1    | Housing                          |              | 18   | Vane Pack (Set of 7)               | 2925-42-7   |
| 3    | Warning Label                    |              | 19   | End Plate, Rear                    | 2161-12     |
| 10   | Bushing, Reverse Valve           |              | 20   | Dowel Pin, Rear End Plate          | 2920-74     |
| 2    | Information Label                | 1-800-LABEL  | 21   | Bearing, Rear End Plate            | 4E-510      |
| 3    | Warning Label                    | WARNING-2-99 | 22   | Gasket, Handle                     | 2161-739    |
| 5    | Gasket, Hammer Case              | 2161-36      | 23   | Washer, Motor                      | 2161-207    |
| *    | Reverse Valve Assembly           | 2190-A329    | *    | Handle Assembly (2190Ti, 2190Ti-6) | 2190-A92    |
| 11   | Reverse Valve                    |              | *    | Handle Assembly (2190DTi-6)        | 2925B-A92   |
| 12   | O-Ring, Reverse Valve            |              | 24   | Handle                             |             |
| 26   | Snap Ring, Reverse Lever         |              | 9    | O-Ring, Housing                    |             |
| 27   | Spring, Reverse Lever            |              | 22   | Gasket, Hammer Case                |             |
| 40   | Reverse Lever                    |              | 25   | Grease Fitting                     |             |
| 13   | Bearing, Front End Plate         | 834-24       | 26   | Snap Ring, Reverse Lever           |             |
| 14   | End Plate, Front                 | 2161-11      | 27   | Spring, Reverse Lever              |             |
| *    | Cylinder Assembly                | 2925-A3      | 28   | Pipe Plug (2190Ti, 2190Ti-6)       |             |
| 15   | Cylinder                         |              | 29   | Plunger Pin                        |             |
| 16   | Dowel Pin, Cylinder (2)          |              | 30   | Valve Seat                         |             |
| 16   | Dowel Pin, Cylinder (2 Required) | JC3350-538   | 31   | Throttle Valve                     |             |







| Item | Part Description                        | Part Number | Item | Part Description                           | Part Number   |
|------|---|-------------|------|--|---------------|
| 32   | Spring, Inlet                           |             | *    | Socket Retainer Kit                        | 2190-SRK1     |
| 33   | Air Strainer                            |             | 45   | Socket Retainer                            |               |
| 34   | Inlet Bushing Assembly                  |             | 46   | O-Ring, Socket Retainer                    |               |
| 35   | Trigger                                 |             | *    | Anvil Assembly (2190Ti)                    | 2080-A726     |
| 36   | Trigger Pin                             |             | *    | Anvil Assembly (2190Ti-6, 2190DTi-6)       | 2080-A826-6   |
| 37   | Dowel Pin, Trigger (2190DTi-6)          |             | 47   | Anvil Assembly                             |               |
| 38   | Throttle Actuator (2190Ti,<br>2190Ti-6) |             | 46   | O-Ring, Socket Retainer                    |               |
| 39   | Plug (2190Ti, 2190Ti-6)                 |             | 45   | Socket Retainer                            |               |
| *    | Inlet Parts Kit (2190Ti, 2190Ti-6)      | 2190-K303   | 48A  | Bushing, Hammer Case (2190Ti)              | 2161-641      |
| *    | Inlet Parts Kit (2190DTi-6)             | 2190D-K303  | 48B  | Bushing, Hammer Case (2190Ti-6, 2190DTi-6) | 2080-641-6    |
| 28   | Plug (2190Ti, 2190Ti-6)                 |             | *    | Hammer Case Assembly (2190Ti)              | 2190Ti-D727   |
| 29   | Plunger Pin                             |             | *    | Hammer Case Assembly (2190Ti-6,            |               |
| 30   | Valve Seat                              |             | -    | 2190DTi-6)                                 | 2190Ti-6-D727 |
| 31   | Throttle Valve                          |             | 49   | Hammer Case                                |               |
| 32   | Spring, Inlet                           |             | 48   | Bushing, Hammer Case                       |               |
| 33   | Air Strainer                            |             | *    | Dead Handle Assembly                       | 2080-A48      |
| 34   | Inlet Bushing Assembly                  |             | 50   | Dead Handle                                |               |
| 25   | Grease Fitting                          | R1-188      | 51   | Strap                                      |               |
| *    | Trigger Assembly (2190Ti, 2190Ti-6)     | 2080-A93    | 52   | Cap Screw (2)                              |               |
| *    | Trigger Assembly (2190DTi-6)            | 2925B-93    | *    | Tune-Up Kit                                | 2190-TK1      |
| 35   | Trigger                                 |             | 5    | Gasket, Hammer Case                        |               |
| 36   | Trigger Pin                             |             | 6    | Silencer, Exhaust                          |               |
| 37   | Dowel Pin, Trigger (2190DTi-6)          |             | 7    | Exhaust Deflector                          |               |
| 38   | Throttle Actuator (2190Ti, 2190Ti-6)    | 2080-94A    | 8    | Snap Ring, Exhaust                         |               |
| 39   | Plug (2190Ti, 2190Ti-6)                 | 2080-95     | 9    | O-Ring, Housing                            |               |
| 41   | Socket Head Capscrew (4)                | 2080-638    | 12   | O-Ring, Reverse Valve                      |               |
| *    | Hammer Frame Kit                        | 2190-K703   | 13   | Bearing, Front End Plate                   |               |
| 42   | Hammer Frame                            |             | 18   | Vane Pack (Set of 7)                       |               |
| 43   | Hammer Pin (2)                          |             | 21   | Bearing, Rear End Plate                    |               |
| 4    | Washer, Hammer Frame                    |             | 22   | Gasket, Hammer Case                        |               |
| 5    | Gasket, Hammer Case                     |             | 27   | Spring, Reverse Lever                      |               |
| *    | Hammer Kit (2190Ti)                     | 2190-THK1   | 45   | Socket Retainer                            |               |
| *    | Hammer Kit (2190Ti-6, 2190DTi-6)        | 2190-6-THK1 | 46   | O-Ring, Socket Retainer                    |               |
| 44   | Hammer (2)                              |             | *    | Air Tool Oil (4oz. bottle)                 | 10Z4          |
| 47   | Anvil Assembly                          |             | *    | Grease (1-lb can)                          | 105-1LB       |
| 5    | Gasket, Hammer Case                     |             | *    | Grease (8-lb can)                          | 105-8LB       |

<sup>\*</sup> Not illustrated.

## **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

 $Tool\ repair\ and\ maintenance\ should\ only\ be\ carried\ out\ by\ an\ authorized\ Service\ Center.$ 

Refer all communications to the nearest  ${\bf Ingersoll~Rand~Office}$  or Distributor.

## **Related Documentation**

For additional information refer to:
Air Impact Wrench Product Safety Information Manual 04580916,
Air Impact Wrench Product Information Manual 04584900.

Manuals can be downloaded from ingersoll randproducts.com

